

Technical Specification

Home charger input: 110/240V~50/60Hz	Home charger output: 21V~80V
Battery: 21V 4.0Ah	Charge time: up to 180 mins
Pressure: up to 800 psi	Max. inlet water pressure: 72.5 psi
Water flow rate: 2.5 to 3.0 litres per minute	Pressure washer gun dims: 420x250x150mm
Max suction height: 5ft.	

Important Safety Instructions

- WARNING:** When using this product basic precautions should always be followed, including the following: expose cells or batteries to heat or fire. Avoid storage in direct sunlight.
- 1) Read all the instructions before using the product.
 - 2) Do not operate this product until you have checked that all components have been assembled correctly and are firmly in place.
 - 3) To reduce the risk of injury, close supervision is necessary when a product is used near children.
 - 4) Keep this device out of reach of children and do not allow children to use this product.
 - 5) Always be alert when using this product and watch what you are doing.
 - 6) Do not operate the product when fatigued or under the influence of alcohol or drugs.
 - 7) Ensure the area where you intend to use this product is clear of people and/or objects you do not want to get wet or damaged before operating this product.
 - 8) Do not overreach or stand on an unstable surface or support in order to use this product. Ensure you have good footing and balance at all times in order to avoid damage or injury to you, other people or animals.
 - 9) **WARNING** – Risk of damage or injury. Do not direct discharge stream at people, animals or other objects that can be harmed or damaged by water or a pressurised water flow.
 - 10) Always test the effect of the pressurised water flow on a small area of the object you are about to clean or direct the water spray at, preferably out of sight, to ensure that the pressurised water flow will not cause any damage.
 - 11) Do not spray at electrical apparatus and wiring.
 - 12) Do not leave this device unattended with the battery pack connected.
 - 13) Retain these instructions for future reference.
 - 14) Failure to follow these instructions and warnings, could result in electric shock, fire or serious injury.

Disposal of Old Electrical & Electronic Equipment
- applicable in the European Union.

If you see this symbol on a product or its packaging, it indicates that the product should not be treated as normal household waste. If you see this symbol on any product or packaging it should be handed over to an applicable collection point for the recycling of electrical equipment.

By ensuring that this product is disposed of correctly you will help prevent a potentially negative impact on the environment. In addition the recycling of materials will help to conserve natural resources. For further information about recycling please contact your local civic office or recycling centre.



Battery Pack General Safety Warnings

- 1) **WARNING:** Risk of fire and burns. Do not disassemble, heat above 100°C (212°F), or incinerate. Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.
- 2) Dispose of used batteries promptly in accordance with local laws. When disposing of secondary cells or batteries, keep cells or batteries of different electrochemical systems separate from each other.
- 3) Keep batteries out of reach of children and in original packaging until ready to use.
- 4) Never put batteries in your mouth. If swallowed, contact your GP immediately.
- 5) **CAUTION** – The battery used in this device may present a risk of fire or chemical burn if mistreated. Only replace the battery with official Aguri batteries. Use of another battery may present a risk of fire or explosion.
- 6) **WARNING:** Do not use a visibly damaged battery pack or appliance as applicable.
- 7) **WARNING:** Do not modify or attempt to repair the appliance or the battery pack as applicable.
- 8) **BATTERY MUST BE RECYCLED IN ACCORDANCE WITH LOCAL LAWS.**
- 9) Do not short-circuit a cell or battery. Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.
- 10) Do not subject cells or batteries to mechanical shock.
- 11) Keep cells and batteries clean and dry. Wipe the cell or battery terminals with a clean dry cloth if they become dirty.
- 12) Do not maintain secondary cells and batteries on charge when not in use.
- 13) Retain the original cell and battery literature for future reference.
- 14) Do not use any charger other than the one specifically provided for use with the equipment. Secondary cells and batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- 15) When possible, remove the battery from the equipment when not in use.
- 16) Remove the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance to prevent it from starting accidentally.
- 18) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- 19) Any servicing or repair work should only be performed by a qualified repair person using only identical re-placement parts to avoid damaging the unit or endangering yourself.
- 20) Failure to follow these instructions and warnings, could result in electric shock, fire or serious injury.
- 21) Retain these instructions for future reference.



Power Clean
Cordless Pressure Washer

User Guide

Please read carefully before use.



What's in the box

1. Pressure washer gun
 2. Long wand and spray head
 3. Soap gun
 4. Rechargeable battery
5. Battery charger
 6. Short hose and filter
 7. Hard style storage case

Power Clean

Operating instructions



01

Charging the battery

Slide the battery into the charging dock as indicated and plug the charger into a standard 240V house socket.

It will take approx 180 mins to fully charge the battery from empty.

The charging LED will change from red to green once the battery is fully charged.



02

Connecting the wand to the main body of the pressure washer

Push the long wand and spray head firmly into the gun and rotate to lock it into place.

Check that the wand is fully connected before using the pressure washer.



03

Using the soap gun

Unscrew the top of the soap gun and fill it with a suitable liquid detergent. Align it with the main body of the pressure washer, push it firmly in and rotate clockwise to lock it into place.

Once you have connected the soap gun, follow the instructions later in this manual, explaining how to connect the hose and operate the pressure washer.

Always check that the soap gun is fully connected before use.



04

Connecting the battery

Slide the battery on to the handle of the gun until it 'clicks' into place. To remove the battery, press and hold the orange button and slide the battery off.



05

Connecting a hose

Connect the short hose and filter provided or your own hose pipe to the main body of the pressure washer. Push the female adaptor firmly on to the male receptor until you feel it 'click' in to place.



06

Using the short hose and filter

If you are using the short hose and filter supplied, submerge the filter end in to a bucket of water.

If the filter floats back to the top, lightly shake it while it is still submerged to release any pockets of air that are trapped in the filter.



07

Adjusting the spray head

Turn the water off if you have connected the pressure washer to a hose and tap, then rotate the spray head to the spray setting required.



08

Adjusting the water pressure output

Pull the trigger so that the gun is operating and emitting water then press the On/Off Power Button to cycle through the three pressure level outputs.

Please note that you can only change the pressure setting when the trigger is being pulled and the motor is running.



09

Operating the pressure washer

Once the wand or soap gun, and the hose is fully assembled the pressure washer is ready to use.

If you are using the short hose included with the pressure washer, ensure that the filter end is fully submerged in to whatever water source you are using.

Next, pull and hold the orange power trigger.

If you are connected to a normal hose with the tap

'open' the gun will emit pressurised water almost immediately. If you are using the short hose and filter supplied, submerged in something like a bucket of water, it may take about 20 seconds for the pressurised water to reach the gun and start to flow. Press the power on/off button to switch between low, medium and high pressure as required.

Release the orange power trigger whenever you want to stop the water flow.

If you have connected the washer to your own hose, ensure the hose is safely connected to the tap and turn the water on.

Please note that it may take up to 20 seconds for the water to travel the length of the hose and reach the gun after you have pulled the trigger. The maximum length of hose when drawing water from a bucket is 6m.

Using the soap gun and hose

If you have the soap gun and a hose connected, carefully aim the pressure washer at the object you want to cover in soap and pull the trigger. The pressure washer will automatically emit a mixture of soap and water. Use the soap gun to cover the object you want to wash, such as a bike or vehicle, then clean as normal using a suitable brush or sponge. Next, remove the soap gun from the main body of the pressure washer, re-attach the wand and rinse off the soap with clean water. Release the orange power trigger whenever you want to stop the flow of soap and water.